

- 7) Select "T-Modem" in the modem list in "Properties" dialog box.
- 8) It is very important to enter APN (applies only to GPRS / EDGE connections). Run T-Modem Control Tool and click GPRS->Settings. Enter the APN in the dialog box. **Your operator may ask you to enter a special string like "AT+CGDCONT=..." as modem extra initialization command. This step is equivalent to setting APN in T-Modem Control Tool, so you must perform only one of the two steps.**
- 9) Internet connection is set up successfully.

4. Connecting to the Internet.

- 1) Check if the device is connected to the PC and both red and green LEDs on the device are on and not blinking.
- 2) Click "Start->Settings".
- 3) Double click "Network connections" (WinXP), "Network and dial-up connections" (Win2000), "Dial-up connections" (Win95/98/ME).
- 4) Double click the connection you have just created.
- 5) Click "Dial".
- 6) You should get connected to the Internet in a few seconds. If the connection is successful, you will see a connection indicator (two green or blue small computers) in the system tray (lower right corner of the screen).
- 7) When you want to disconnect, double click the connection indicator and click "Disconnect".



5. Sending SMS.

Note: please make sure that SMS service is supported by your operator.

Note: please ensure that SMS centre number is defined it (T-Modem Control Tool, SMS -> Settings). If it isn't, ask your GSM operator for SMS centre number and enter.

- 1) Run T-Modem Control Tool.
- 2) Click SMS->Send.
- 3) Enter recipient phone number.
- 4) Enter the text.
- 5) Click "Send".
- 6) Wait for a dialog box, which will inform you about successful or unsuccessful procedure.

TROUBLESHOOTING

- 1) Problem: T-Modem Control Tool doesn't detect the modem.
Solution: Check if the device is connected and that both red and green LEDs are on.
- 2) Problem: Can't connect to the Internet.
Solution: Check if the drivers are installed properly.

LED INDICATION

"Power" LED is on	power supply is connected
"Status" LED is green and blinking	the device is powering up
"status" LED is green	the device is ready
"status" LED is yellow and blinking	no SIM card, PIN is not entered or no GSM service
"Status" LED is yellow	Connection active

FINAL NOTES

For more information, please read T-ModemUSB User Manual, which is found on the CD.

If you encounter any problems when using our products, please contact our technical support by writing an e-mail to support@teltonika.lt. We will be pleased to help you.

T-ModemUSB
TMU-103



Quick Start Guide
v1.0

Thank You for purchasing T-ModemUSB from Teltonika Ltd. We hope you will be happy using our product. Please find a few minutes to read this Quick Start Guide before beginning to work with T-ModemUSB. This could prevent you from unwanted problems and save your precious time.

T-ModemUSB is a device with GSM / GPRS / EDGE / CSD / HSCSD connectivity which enables your computer to connect to the Internet quickly and easily. Having this device your PC will have Internet connection in any place of the world, where GSM network is accessible.

CONTENTS OF YOUR PACKAGE

- 1) T-ModemUSB,
- 2) USB A <-> USB mini B cable,
- 3) A CD (including drivers and User Manual),
- 4) A Quick Start Guide,

If you miss any of the components listed, please contact your local representative.

HOW TO START QUICKLY?

1. Hardware setup.

- 1) Insert SIM card to the device as shown on the picture on the device and ensure that you pulled SIM card **to the end**. Please be careful **not to move the card during device operation**, as this would drop any active connections and modem reboot will be required.
- 2) Plug the small connector of the USB cable to the device.
- 3) Plug the big flat connector of the USB cable to a free USB port of your PC.

2. Setting up software and driver for Microsoft Windows 95/98/ME/2000/XP.

2.1. Installing modem drivers.

- 1) Switch your PC on and boot Microsoft Windows.
- 2) Please ensure that you have successfully completed hardware setup of the device.
- 3) Just after plugging the USB cable, Windows will detect a "T-ModemUSB" device.
- 4) **WinXP:**
 - a) Windows will automatically detect and start installing drivers for "T-ModemUSB", "USB Serial Port" and "USB High Speed Serial converter". Windows XP already has these drivers and should perform this step without user intervention. Occasionally, if you are asked for the drivers or want to install newer drivers, point to the folder "\\Drivers\\T-ModemUSB\\Windows" on the CD.
 - b) Windows will detect "Nokia Mobile Phones 12 Data/Fax" and ask you to install drivers.
 - c) If you are asked whether you want to "Connect to windows Update to search for new software", click "No", as it doesn't contain drivers for T-ModemUSB.
 - d) Select "Install from a list or specific location (Advanced)" in the next dialog. Click "Next".
 - e) Select "Search for the best driver in these locations" and check "Include this location in the search". Click "Browse" and point to CD folder "\\Drivers\\T-ModemUSB\\Windows". Select file "T-Modem.inf". Click "Next".
 - f) If you are warned that the driver has not passed Windows Logo testing, click "Continue Anyway".
 - g) Click "Finish".

Win95/98/ME/2000:


- a) Windows will ask for drivers for "T-ModemUSB", "USB Serial Port", "USB High Speed Serial converter" and "Nokia Mobile Phones 12 Data/Fax".
- b) Select "Search for the best driver in these locations" each time and click

"Browse". Point to CD folder "\\Drivers\\T-ModemUSB\\Windows". Select file "ftdibus.inf" when installing "T-ModemUSB", "USB Serial Port" or "USB High Speed Serial converter" and select "T-Modem.inf" for "Nokia Mobile Phones 12 Data/Fax".

- 5) The modem drivers have successfully been installed. You may be asked to restart your computer.

2.2. Installing T-Modem Control Tool.

- 1) Insert the CD, which is found in the package, into your PC CD tray.
- 2) An installation program will launch automatically. If it doesn't, open My Computer and double click on the CD-ROM drive. The setup program is located in folder "\\Software\\".
- 3) Click "Next" in 3 upcoming dialog boxes.
- 4) Click "Install" in final dialog box.
- 5) Leave checkbox "Launch T-Modem" checked and click "Finish".

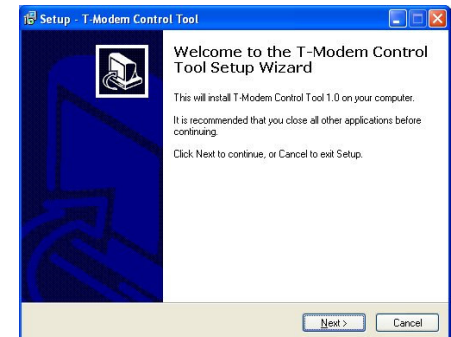

- 6) Click "Search for T-Modem" in the T-Modem Control Tool.
- 7) The program will detect the device and show the COM port, to which the device is connected.
- 8) Installation of the T-Modem Control Tool is complete.



3. Setting up an Internet connection.

Please consult your GSM operator for detailed instructions on how to get connected to the Internet. You should ask the operator to switch on the desired service (GPRS/EDGE or HSCSD) for your SIM card and to tell you how to configure your PC. The required parameters for connection are: **phone number, username, password and APN** (APN for GPRS/EDGE only).

There are two basic types of connections, which are different in the way they are paid for:

- Pay-for-time connection (CSD, HSCSD). You pay for the time you spend in the Internet. The speed is up to 14,4 kbps (CSD) or 43,2 kbps (HSCSD).
- Pay-for-data connection (GPRS, EDGE). You pay for the data you transfer. The maximum speed depends on the operator, but it may reach 115 kbps. If your operator supports higher speed and you want to reach it, you should use a COM port with higher baud rate (a USB<->COM or PCI-COM adapter) or purchase T-ModemUSB.

3.1. Setting up networking protocol and dial-up.

- 1) Please ensure that Dial-up networking is installed on your PC.
- 2) Please ensure that TCP/IP protocol is installed on you PC.

3.2. Setting up a dial-up connection.

Note: this step will be successful only if dial-up and TCP/IP protocol are installed.

- 1) Click "Start->Settings->Control Panel".
- 2) Double click "Network connections" (WinXP), "Network and dial-up connections" (Win2000), "Dial-up connections" (Win95/98/ME).
- 3) Click "Create a new connection".
- 4) Type in a desired name for connection, e.g. "GSM Internet".
- 5) Enter the given phone number (usually *99***1# or *99# for GPRS / EDGE).
- 6) Enter Username and password which are given by your GSM operator.